






RECOMMENDED HINGE SETUP

ENSURING OPTIMAL DOOR PERFORMANCE

NOV: 24


2 Hinges

Suitable for hollowcore doors measuring up to 2340 x 820mm

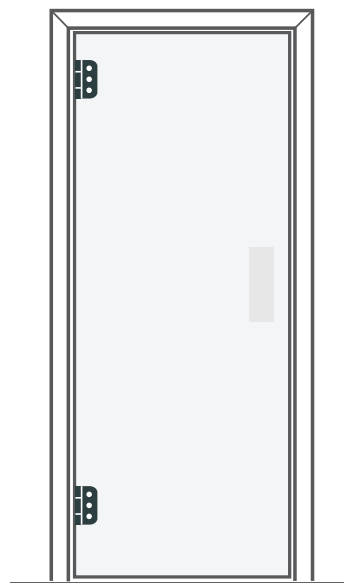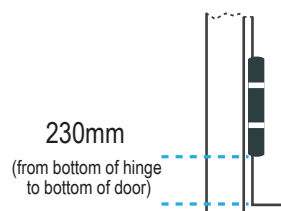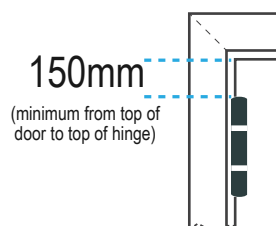


3 Hinges

Ideal for solid or semi-solid doors up to 2040 x 820mm and hollowcore doors exceeding 2340 x 820mm

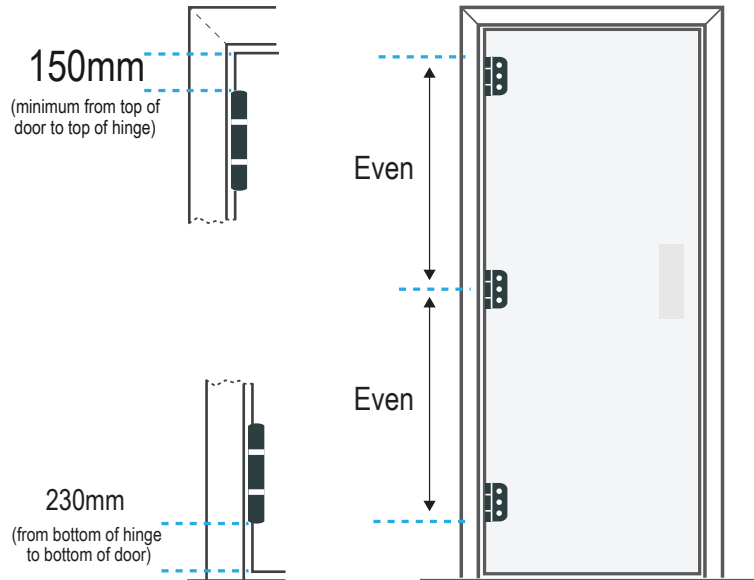


4 Hinges (A) - Evenly Spaced

Recommended for solid doors and doors larger than 2040 x 820mm

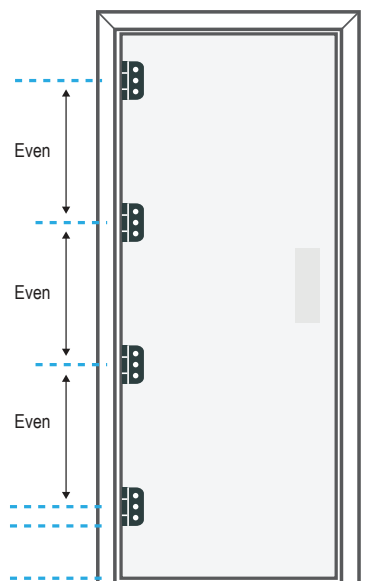


4 Hinges (B) - Top Heavy

Designed for solid doors and doors larger than 2040 x 820mm where additional top reinforcement is needed

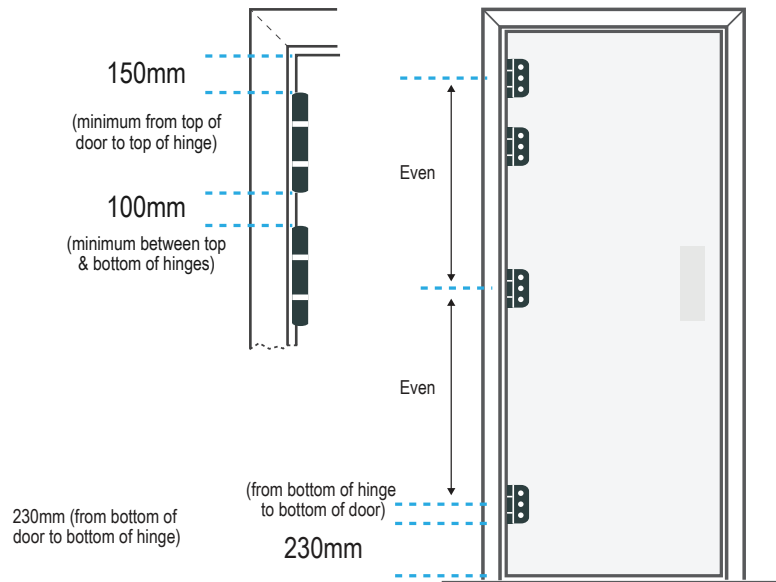

5 Hinges - Evenly Spaced

Best suited for oversized doors above 2500 x 820mm

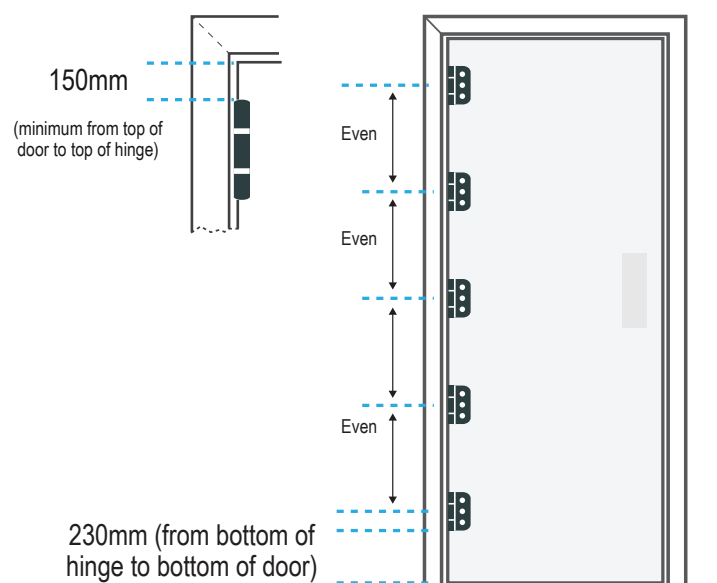

Disclaimer: These guidelines are intended for DIY use. For factory-fitted hinge specifications, please consult your local Hume Doors & Timber office.